

- * The size of this fuse relates to the total current draw of all the loads connected to the House Battery, and should be rated slightly higher than this.
- ** Essential loads are loads which must be left on at all times, until the battery is flat. Non-essential loads are those switched off when the battery reaches a particular low-charge level, which can be set in the 'Advanced Settings' menu.

NOTE: Common Ground connections/cables and cable between House Battery Negative and Battery Sensor MUST be rated for vehicle Start Current levels.

